

Showers

Installation Guide

Showers

Installation Guide



Contents

Important Information	2
Sliding Shower Rails	3
Swivel Bracket	5
Short Shower Combination	7
Round Shower Combination	9
Square Shower Combination	12

Important Information

- All these instructions serve as a guide only and must be installed by a licensed plumber and according to Australian Standards or relevant local authority requirements.
- All supply lines must be flushed prior to installation, removing any foreign matter.
- All plumbing products must be installed to ASNZ3500 Series Standards.
- Showers not installed by a licensed plumber will not be covered by any warranty.
- Please note drainage is not pictured within this installation guide.
- Please ensure your drainage is in accordance with your local standards.

Temperature Rating	70 Degrees
Minimum Water Pressure	500kPa
Maximum Water Pressure	150kPa

In high pressure areas where the pressure exceeds the maximum water pressure as noted above, approved pressure limiting valves must be installed.

If water temperature exceeds 70 degrees, an approved water tempering valve must be fitted.

Failure to comply with all the above may void all warranties.

Experience, the difference.

Sliding Shower Rail Installation




In the box

- | | |
|-------------------------------|---------------------|
| 1. Shower Rail | 7. Expansions Plugs |
| 2. Handpiece Slider | 8. Screws |
| 3. Wall Union | 9. Grub Screws |
| 4. Shower Hose | |
| 5. Handpiece | |
| 6. Mounting Brackets (x2) | |
| (located in shower rail legs) | |

Applicable Product Codes

- SOF-37a
- SOF-37b
- MAS-37a
- MAS-37b

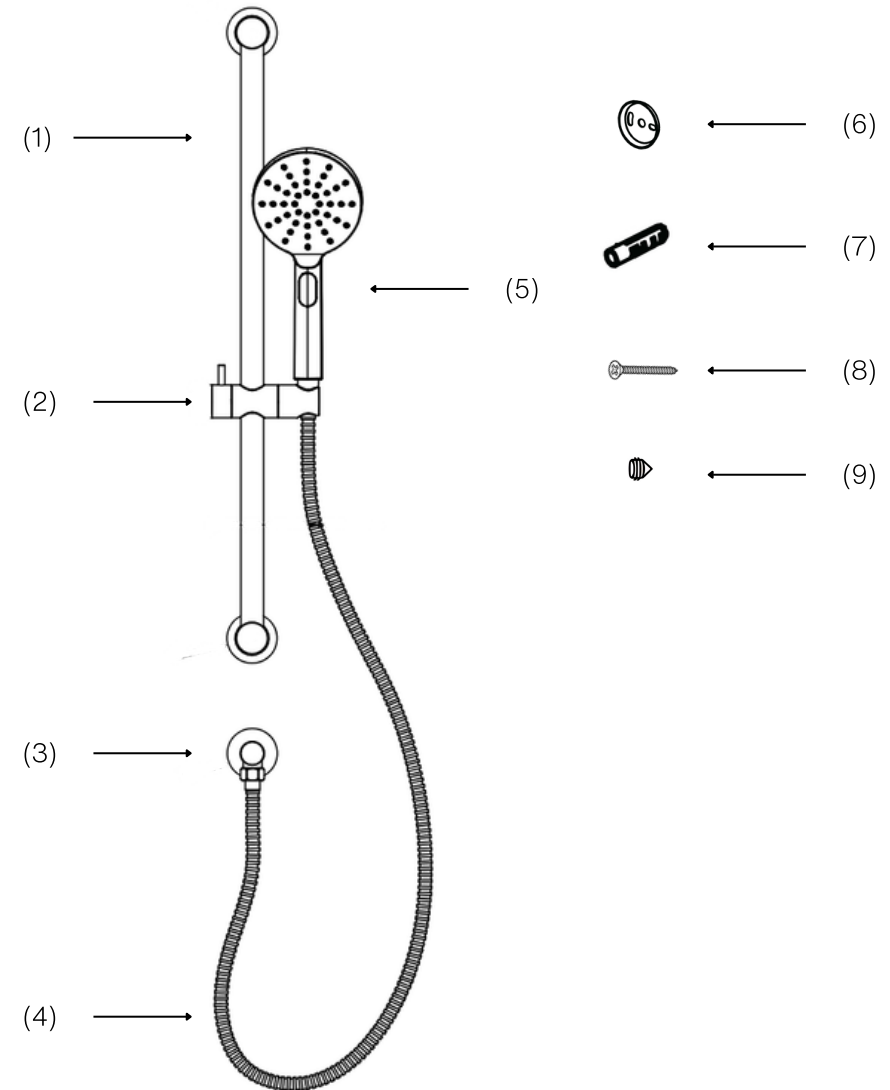


Experience, the difference.


Sliding Shower Rail Installation



1. Installing the Wall Union

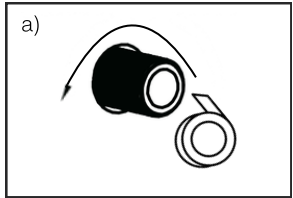


a) Apply Teflon tape to the outlet thread.

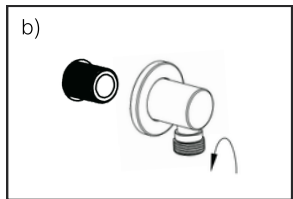


b) Screw the Wall Union onto the outlet. Ensure the union is fixed correctly.

2. Mounting Brackets

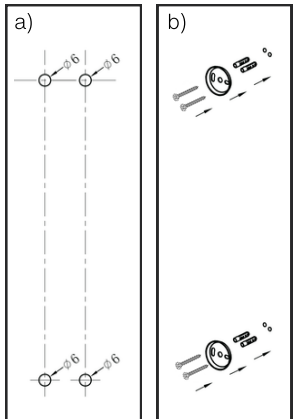


a) Measure and mark the require holes for the shower rails mounting brackets. Drill holes.

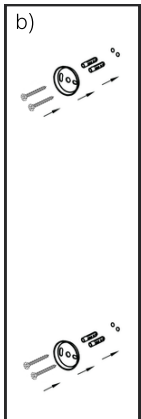


b) Insert expansion plugs into holes. Screw in mounting bracket with screws.

3. Mounting the Rail

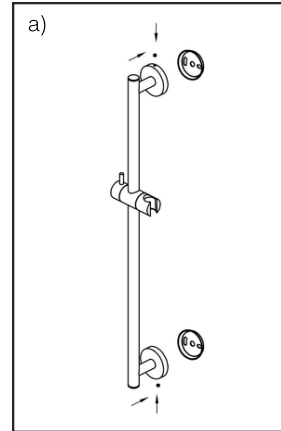

Install shower rail onto brackets by aligning the shower legs onto the brackets and tightening the grub screws.

4. Connect Hose & Handpiece

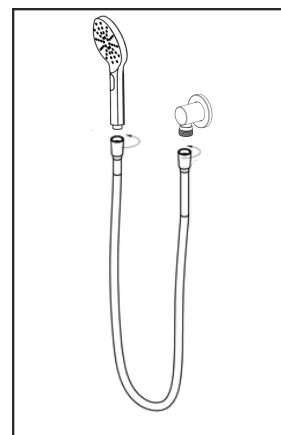

Connect the hand shower and the wall union with the shower hose.

Note: Do not remove shower washers from shower hose.

Test and check for leaks. Clean the shower with a soft cloth to remove any installation residue.

Experience, the difference.

Swivel Wall Bracket Installation




In the box

1. Handpiece
2. Swivel Bracket
3. Shower Hose

Applicable Product Codes

- GIU-38a
- GIU-38b

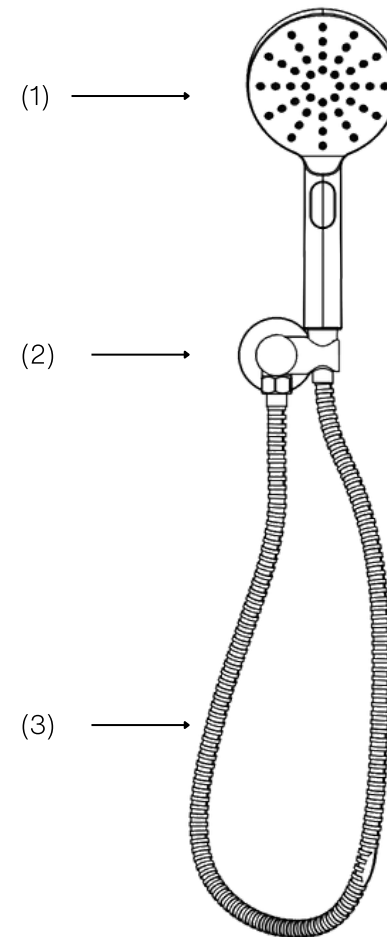


Experience, the difference.


Swivel Wall Bracket Installation




1. Installing the Wall Bracket

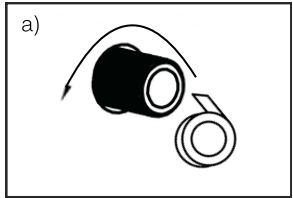

- a) Ensure the water outlet extends 15mm beyond the finished wall. Trim length if necessary. Apply Teflon tape to the outlet thread.

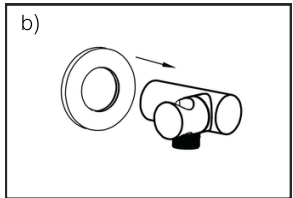


- b) Slide the backplate onto the swivel bracket.

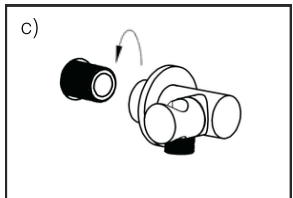

- c) Screw the Swivel Wall Bracket onto the outlet. Ensure the swivel bracket is fixed correctly.

2. Connect Hose & Handpiece

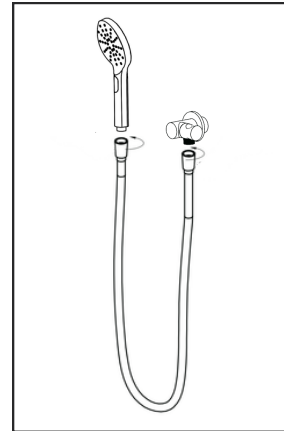

Connect the hand shower and the swivel bracket with the shower hose.

Note: Do not remove shower washers from shower hose.

Test and check for leaks. Clean the shower with a soft cloth to remove any installation residue.

Experience, the difference.

Short Shower Combination Installation




In the box

- | | |
|-------------------|---------------------|
| 1. Shower Head | 8. Mounting Bracket |
| 2. Diverter | 9. Expansion Plugs |
| 3. Backplate | 10. Screws |
| 4. Shower Hose | 11. Grub Screws |
| 5. Handpiece | |
| 6. Handpiece Dock | |
| 7. Inlet Adapter | |

Applicable Product Codes

- | | |
|----------------|----------------|
| • SOF-36a-200R | • MAS-36a-200R |
| • SOF-36a-300R | • MAS-36a-200S |
| • SOF-36b-200R | • MAS-36b-200R |
| • SOF-36b-300R | • MAS-36b-200S |
| • ARC-36a-200R | • MAS-36a-300R |
| • ARC-36a-300R | • MAS-36a-300S |
| • ARC-36b-200R | • MAS-36b-300R |
| • ARC-36b-300R | • MAS-36b-300S |

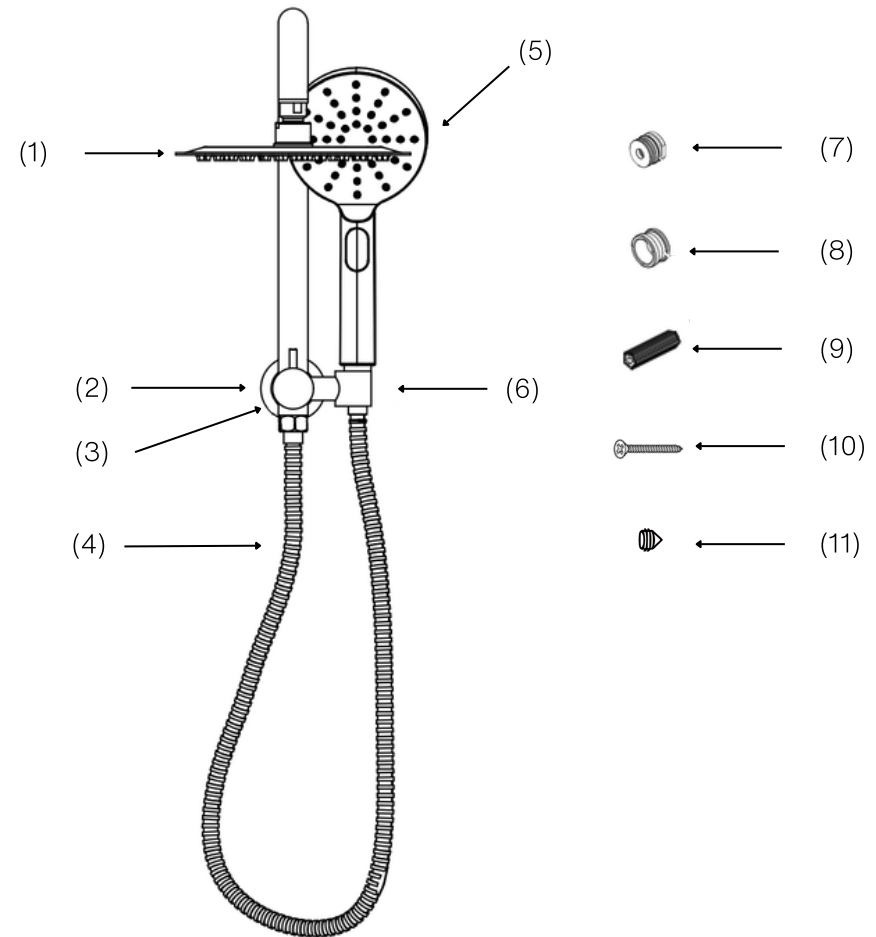


Experience, the difference.


Short Shower Combination Installation



1. Installing Inlet Adapter

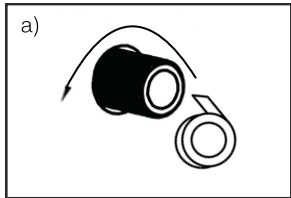


- a) Ensure the water outlet extends 15mm beyond the finished wall. Trim length if necessary. Apply Teflon tape to the outlet thread.

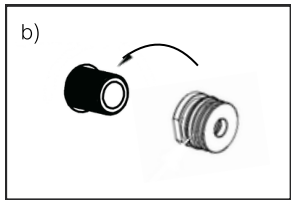


- b) Screw inlet adapter onto the outlet thread.

2. Mounting the Rail

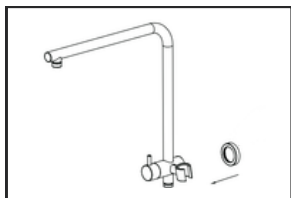


- a) Slide the backplate onto the diverter.

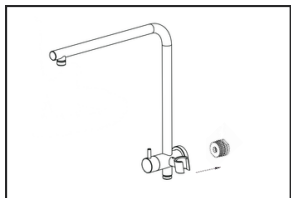

- b) Attach diverter to Water Inlet and position rail in place. Secure short shower rail to the wall by tightening the grub screws.


3. Connect Shower Head

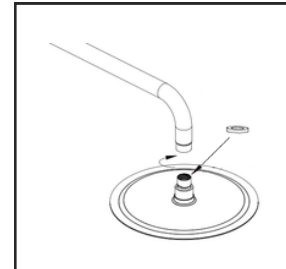

Screw shower head into overhead arm.

Note: Ensure the rubber washer remains in place.

4. Connect Hose & Handpiece

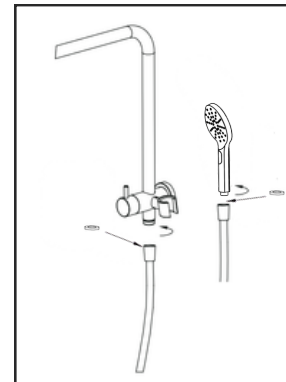

Connect one end of the shower hose to the base of the short shower rail and the other end to the handpiece.

Note: Ensure the rubber washers remain in place.

Test and check for leaks. Clean the shower with a soft cloth to remove any installation residue.

Experience, the difference.

Round Shower Combination Installation

SOFIA & ARCHIE MODELS




In the box

- | | |
|------------------------|--|
| 1. Shower Head | 8. Handpiece |
| 2. Diverter | 9. Inlet Adapter (Located in Diverter) |
| 3. Hand Shower Bracket | 10. Mounting Bracket (Located in Bottom Bracket) |
| 4. Shower Rail | 11. Expansion Plugs |
| 5. Backplate (2) | 12. Screws |
| 6. Bottom Bracket | 13. Grub Screws (Located in Rail) |
| 7. Shower Hose | |

Applicable Product Codes

- | | |
|----------------|----------------|
| • SOF-35a-200R | • ARC-35a-200R |
| • SOF-35a-300R | • ARC-35a-300R |
| • SOF-35b-200R | • ARC-35b-200R |
| • SOF-35b-300R | • ARC-35b-300R |

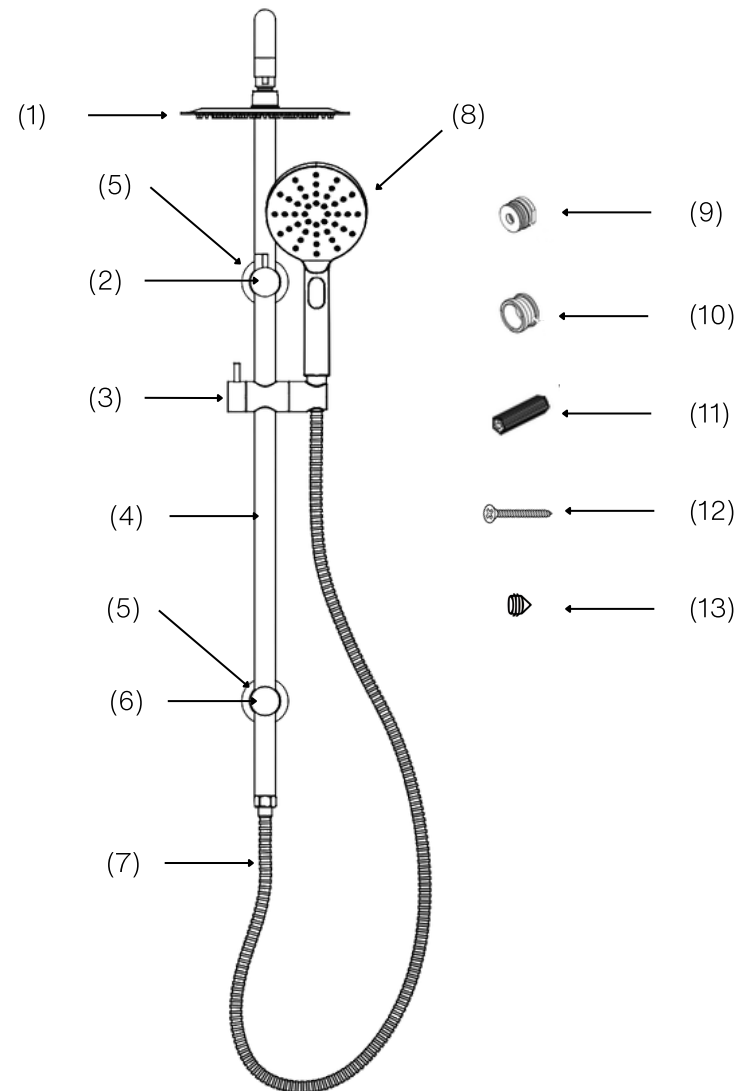


Experience, the difference.

Round Shower Combination Installation


SOFIA & ARCHIE MODELS



1. Preparation for Mounting Brackets

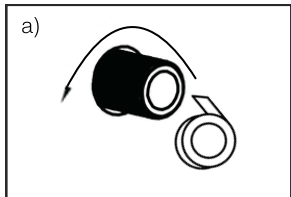


- a) Ensure the water outlet extends 15mm beyond the finished wall. Trim length if necessary. Apply Teflon tape to the outlet thread.

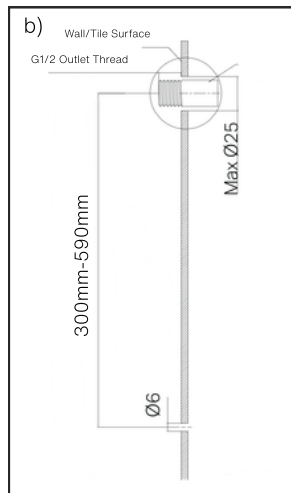


- b) Mark the location for the bottom bracket below the water outlet. Drill mounting hole.

Tip: Complete the first part of Step 3: Assembling the Rail "Screw the shower rail into the diverter bracket" to visualise your shower on the wall before marking points.

2. Mounting Brackets

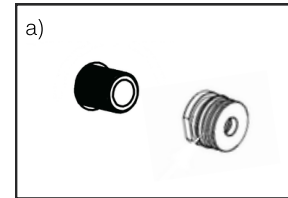


- a) Screw inlet adapter onto the outlet.

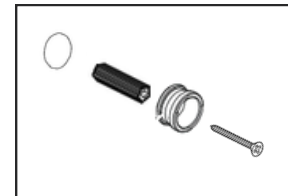

- b) Insert expansion plugs into bottom hole. Secure the mounting bracket to the wall using screws.

3. Assembling the Rail

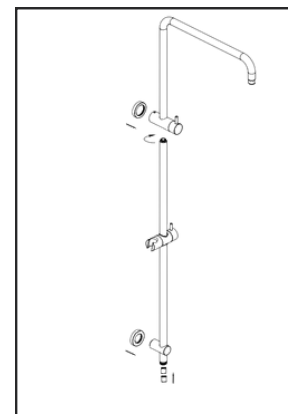

Screw the shower rail into the diverter bracket. Slide backplates into the diverter bracket and the bottom bracket.


Experience, the difference.

Round Shower Combination Installation

SOFIA & ARCHIE MODELS




4. Mounting the Rail

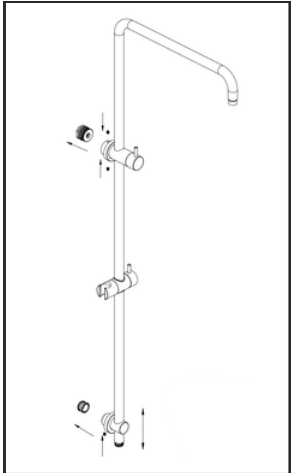

Align the diverter with the inlet adapter and the bottom bracket with the mounting bracket. Secure shower rail to the wall by tightening the grub screws.

6. Connect Hose & Handpiece

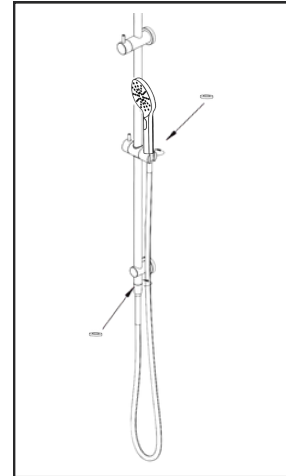


Connect one end of the shower hose to the base of the shower rail and the other end to the handpiece.

Note: Ensure the rubber washers remain in place.

Test and check for leaks. Clean the shower with a soft cloth to remove any installation residue.

5. Connect Shower Head

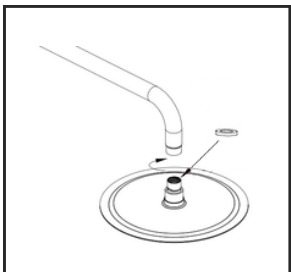

Screw shower head into overhead arm.

Note: Ensure the rubber washer remains in place.

Experience, the difference.

Square Shower Combination Installation

MASON MODEL ONLY




In the box

- | | |
|------------------------|--|
| 1. Shower Head | 8. Handpiece |
| 2. Diverter | 9. Inlet Adapter (Located in Diverter) |
| 3. Hand Shower Bracket | 10. Mounting Bracket (located in Bottom Bracket) |
| 4. Shower Rail | 11. Expansion Plugs |
| 5. Backplate (2) | 12. Screws |
| 6. Bottom Bracket | 13. Grub Screws (Located in rail) |
| 7. Shower Hose | |

Applicable Product Codes

- | | |
|----------------|----------------|
| • MAS-35a-200R | • MAS-35a-300R |
| • MAS-35a-200S | • MAS-35a-300S |
| • MAS-35b-200R | • MAS-35b-300R |
| • MAS-35b-200S | • MAS-35b-300S |

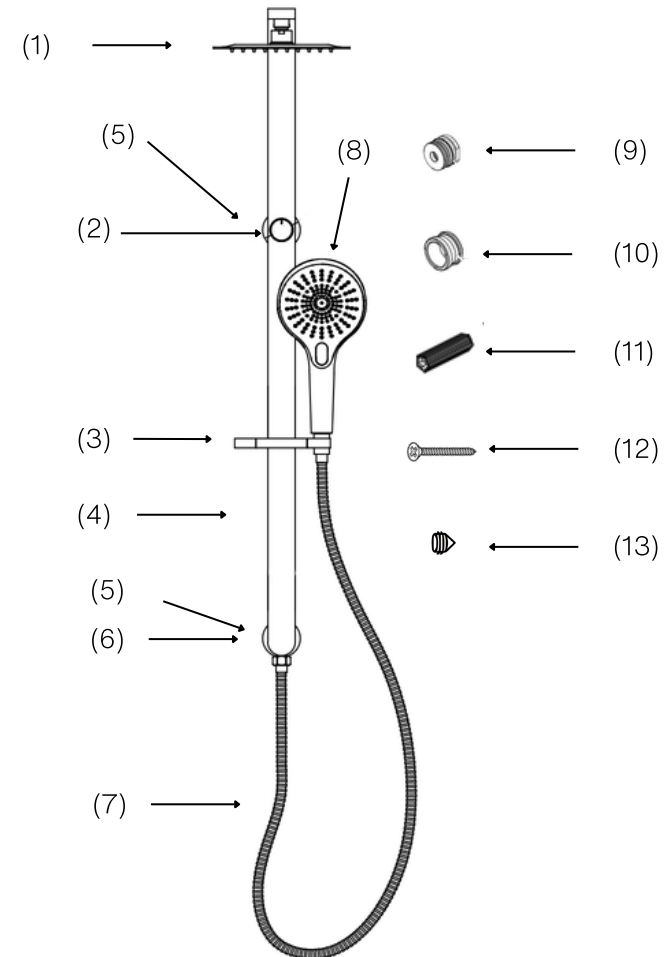


Experience, the difference.

Square Shower Combination Installation


MASON MODEL ONLY



1. Preparation for Mounting Brackets

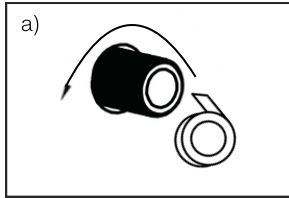


- a) Ensure the water outlet extends 15mm beyond the finished wall. Trim length if necessary. Apply Teflon tape to the outlet thread.

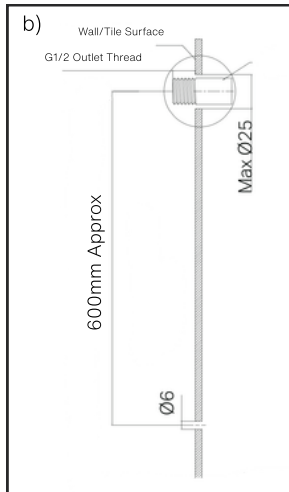


- b) Measure and mark the location for the bottom bracket mounting point in line the water outlet. Drill mounting hole.

2. Mounting Brackets

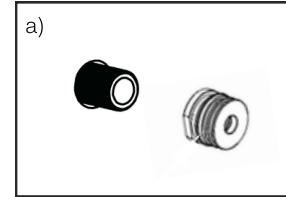


- a) Screw inlet adapter onto the outlet.

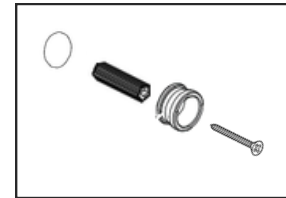

- b) Insert expansion plugs into bottom hole. Secure the mounting bracket to the wall using screws.

3. Assemble the Rail

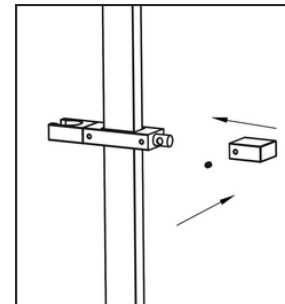

Insert handle of Handpiece bracket into the hand piece bracket. Tighten with grub screw.


Experience, the difference.

Square Shower Combination Installation

MASON MODEL ONLY




5. Mounting the Rail

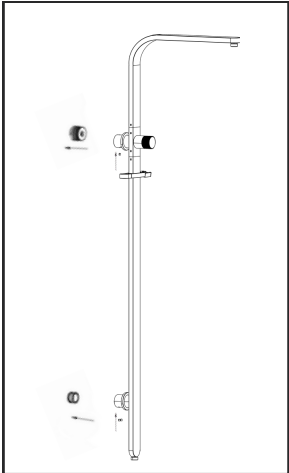

Align the diverter with the inlet adapter and the bottom bracket with the mounting bracket. Secure shower rail to the wall by tightening the grub screws.

7. Connect Hose & Handpiece

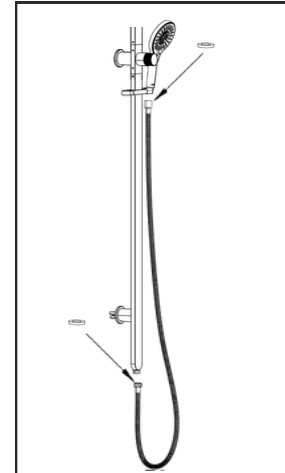


Connect one end of the shower hose to the base of the shower rail and the other end to the handpiece.

Note: Ensure the rubber washers remain in place.

Test and check for leaks. Clean the shower with a soft cloth to remove any installation residue.

6. Connect Shower Head

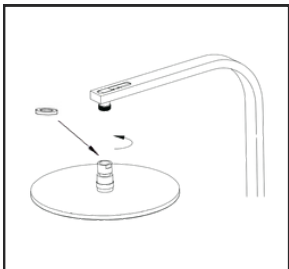

Screw shower head into overhead arm.

Note: Ensure the rubber washer remains in place.

Experience, the difference.



Experience, *the difference.*